

Table-Tennis-Tables.co.uk
TABLE TENNIS ROBOT
INSTRUCTION MANUAL
PP20




Please read this manual before operation

Safety issues and regulations

1. Please read the instruction manual carefully before using the robot, and follow the instructions to operate the robot.
2. Instructive advice should be given when machine is used by children.
3. Avoid outdoor use in windy or rainy conditions.
4. Be careful when connecting and disconnecting the ball collecting net. Ensure that the robot does not fall.
5. When the robot is operating, please do not touch the friction wheel or poke bar either.
6. When the robot is operating, please keep away from the shooting head of the robot to avoid the ball hitting the body.
7. When the robot is operating, if you find something abnormal, such as smoke coming from the machine, please stop the robot and unplug it immediately. Repair or service must be performed by a qualified repair person.
8. Turn the power switch off and unplug the robot after use.

The company has the right to amend the description of products in this manual without and notice in advance.

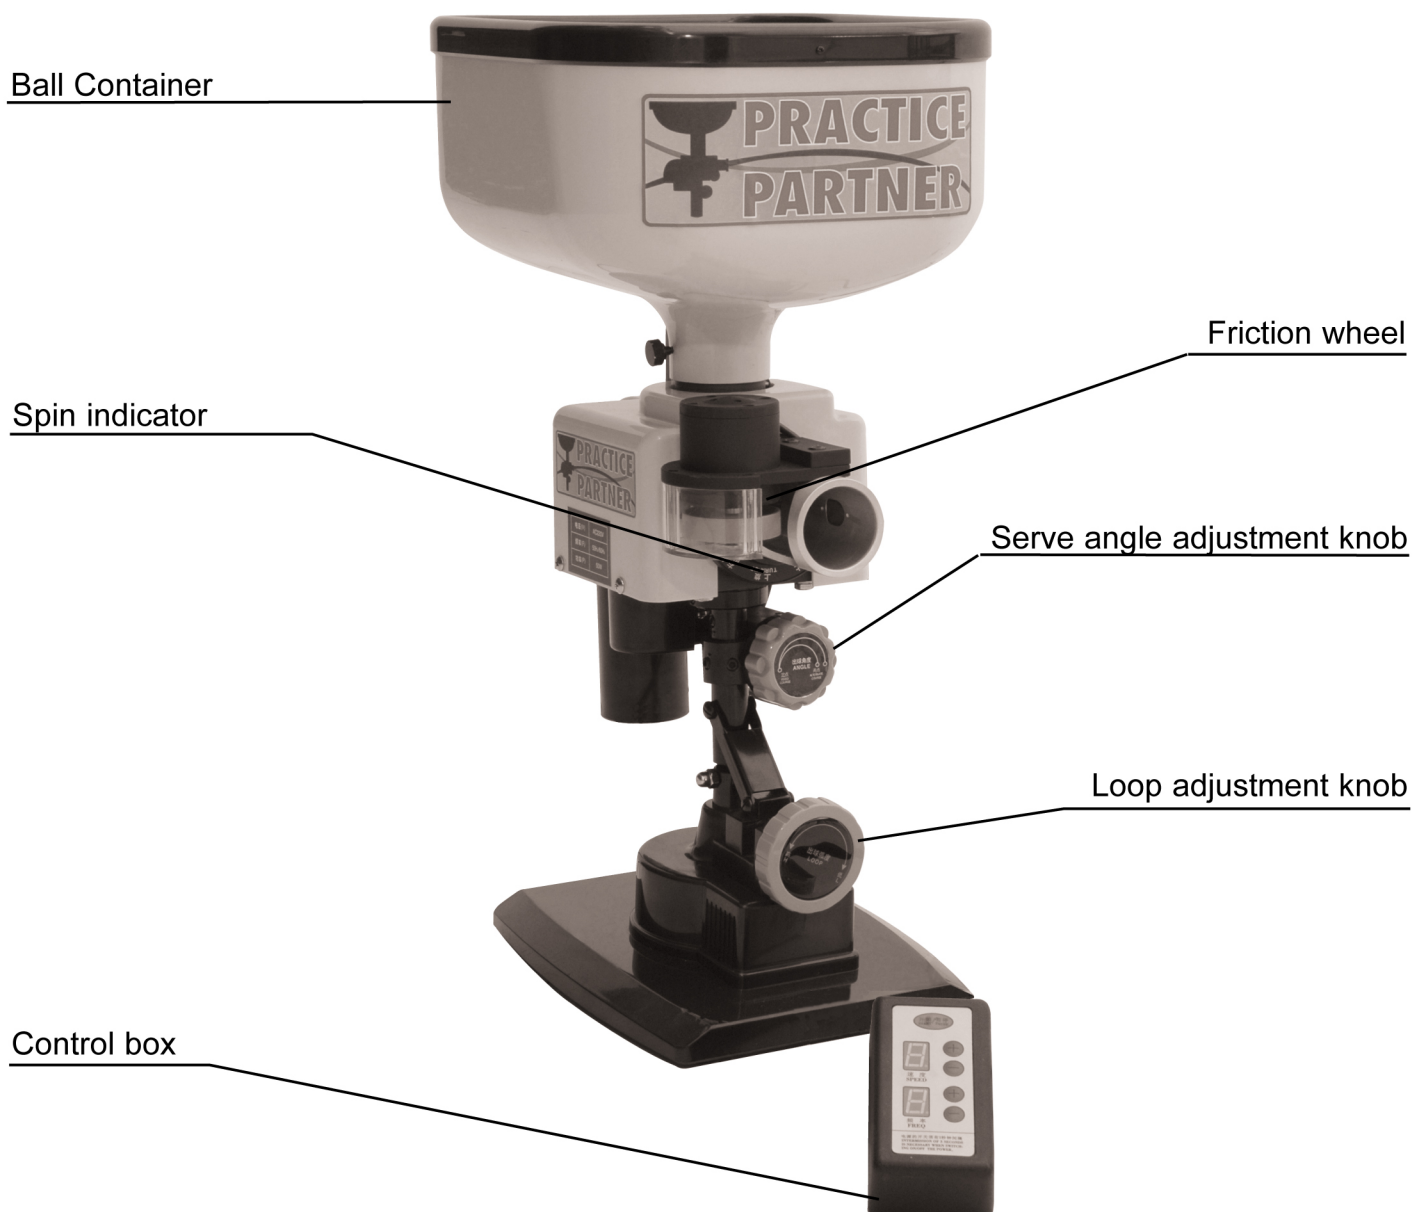

Machine placement

Put the robot on the table, and place the control box near the player side.

Adjusting frequency and speed

Frequency and speed can be adjusted by lightly pressing the button on the control box. Press '+' button for faster rate and '-' button for slower rate.




Ways to serve the ball & loop adjustment

The robot can be set to serve the ball directly or indirectly over the net. A ball served directly carries stronger spin and higher speed. Turning the loop adjustment knob clockwise will result in the shooting pipe pointing higher, thus producing ball served directly. Whereas counter clockwise will result in shooting pipe pointing downwards, thus producing ball served indirectly. These adjustments can be done while the robot is running.




Loop adjustment knob

Direct Way

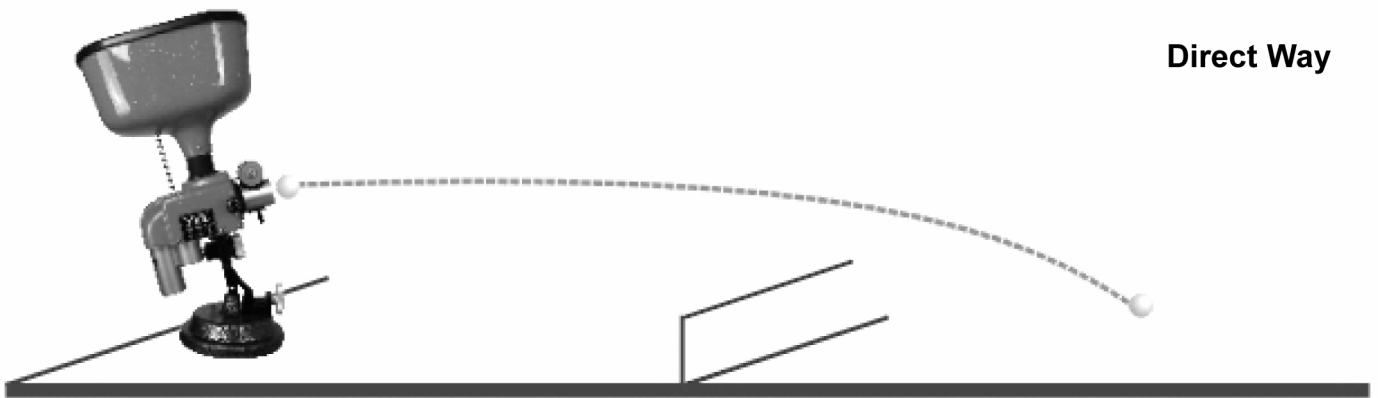


Indirect Way

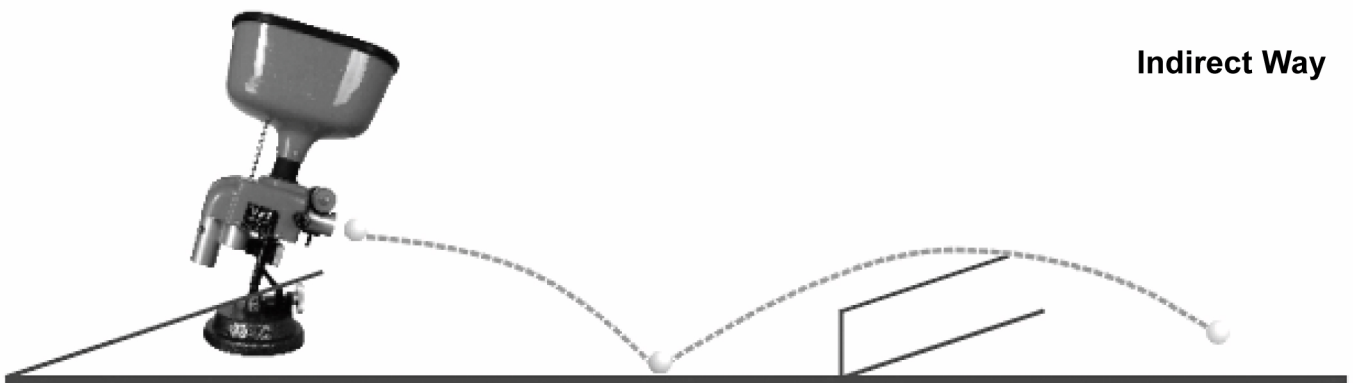

Angle adjustment


While the robot is running, the serve angle can be adjusted by turning the serve angle adjustment knob clockwise, thus producing wider angle. Turn counter clockwise for smaller serve angle. If the knob is turned counter clockwise to its maximum, the ball placement will be fixed.

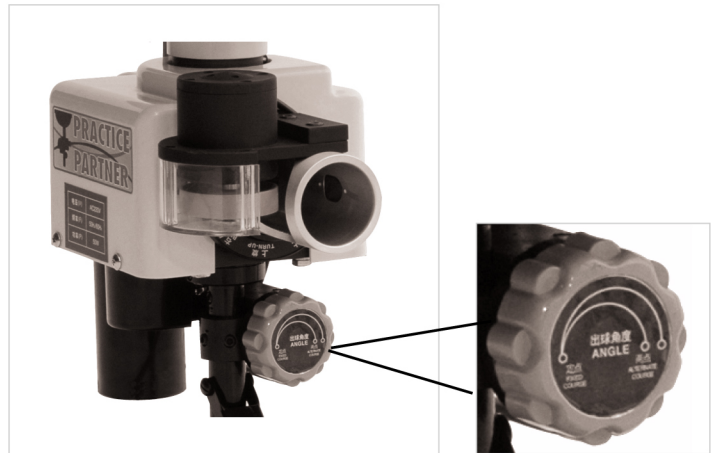

Service angle adjustment knob

Adjusting spin

Loosen the spin locking knob and turn the handle of the motor head. Set the desired spin and make sure that the indicating plate of the motor head aligns with the triangular indicator. Tighten the spin locking knob. The motor head can be turned 360 degrees in both directions, but care should be taken not to over twist the connecting cable.

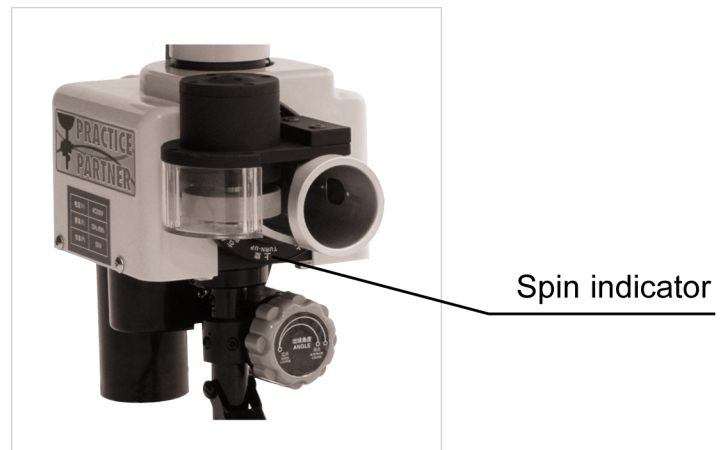

Spin indicator

Power and Switch

Before you turn on the power, make sure that the correct voltage has been used. Voltage varies in different countries. The voltage label is shown on the machine body.

Use the switch on the control box to turn the power on and off. When the exercise is over, disconnect the plug from the socket.